



## FT-818 Installation manual

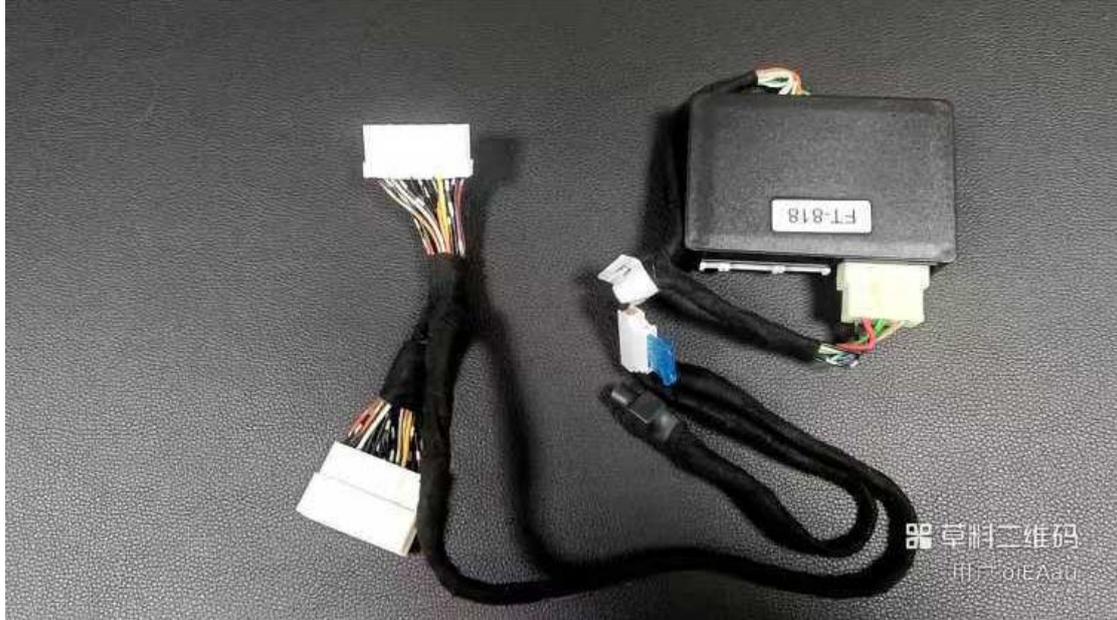

Connector locates : behind the passenger storage compartment

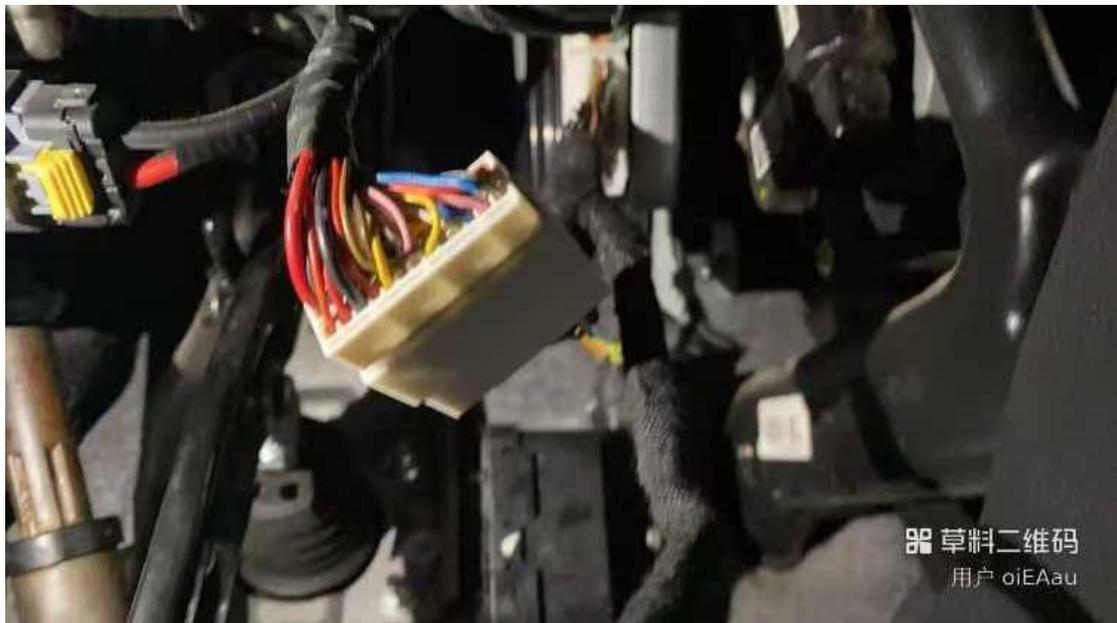

Learning steps:

1. Disconnect all plugs on the product,
2. First press and hold the button, then insert the 6P plug, and the red light will flash. Release the button, and then the green light will flash slowly after a while. When flashing slowly, press and hold the button, and the green light will stay on. After it goes out, release it,
3. Then press the one key start button of the vehicle until it turns on. The LED will flash red first, then green and turn off.
4. After unplugging the fuse on the host wiring harness for 15 seconds and then plugging it back in, the central locking system will lock, indicating that the code learning is complete.

#### 4、 Operation method

Turn off the engine, lock it 3 times, and remotely start the vehicle

In the starting state, press the lock button 3 times again to turn off the vehicle

(The air conditioning is turned on by default before getting off the car. When starting the vehicle, the air conditioning is also turned on.)

Remote start : press lock button of the original key 3 times

Remote stop : press lock button of the original key 3 times after remote started